


Assembly instructions DRIVER for Luna Diamond plus



1. Driver
2. Swipe
3. LED module
4. LED Strip
5. Power cable LED module
6. Interface cable LED module
7. Temperatuur probe
8. Interface cable for motors
9. Power cable 220V
10. connecting adaptor PVC tube
11. Flexible PVC tube for draft measurement




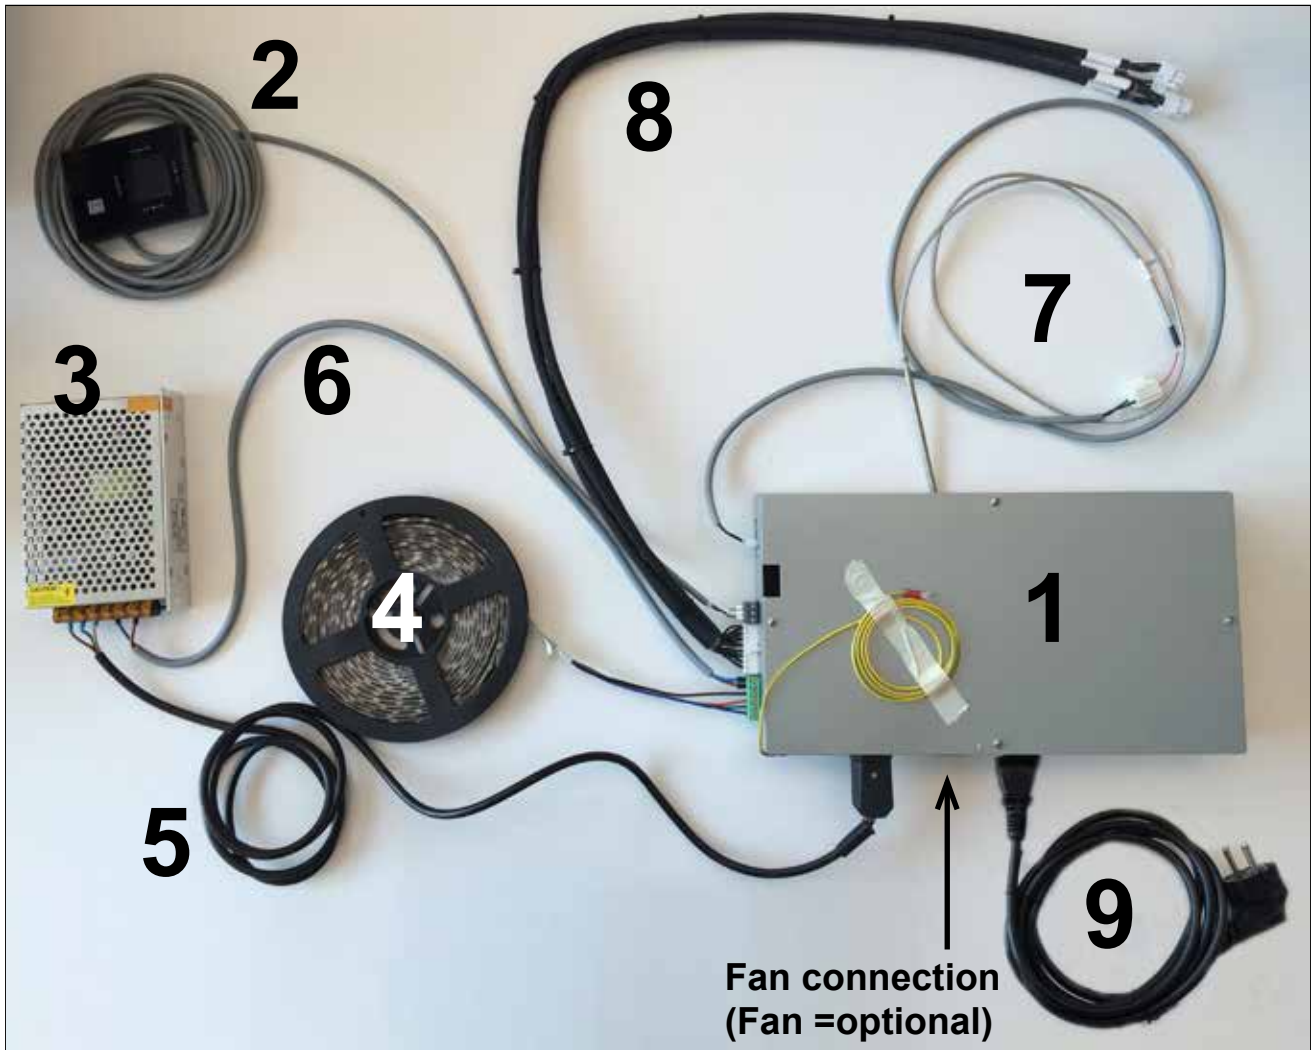

1. Driver



2. Swipe

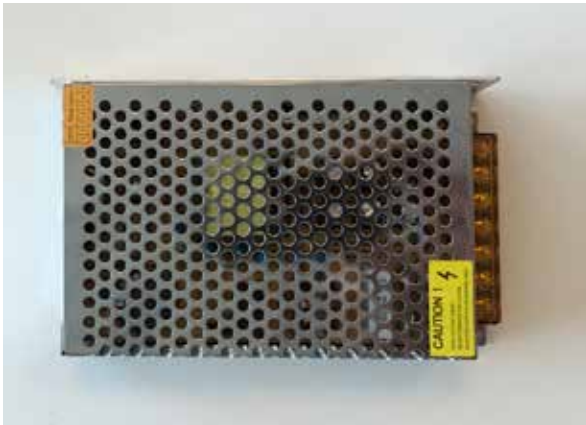

3. LED module



4. LED Strip



5. Power cable LED module



6. Interface cable LED module



7. Temperature probe







8. Interface cable for motors





9. Power cable 220V


Connecting the LED Module

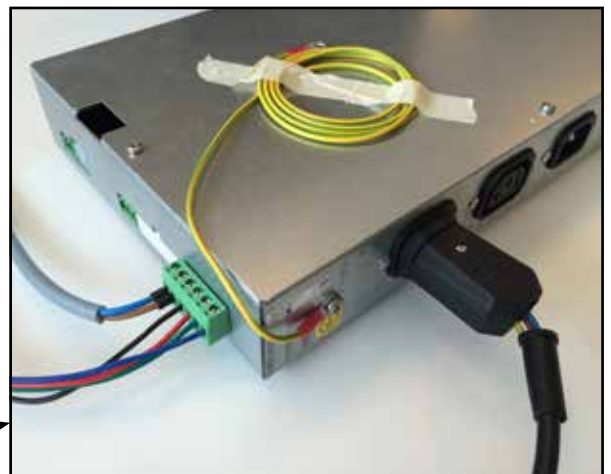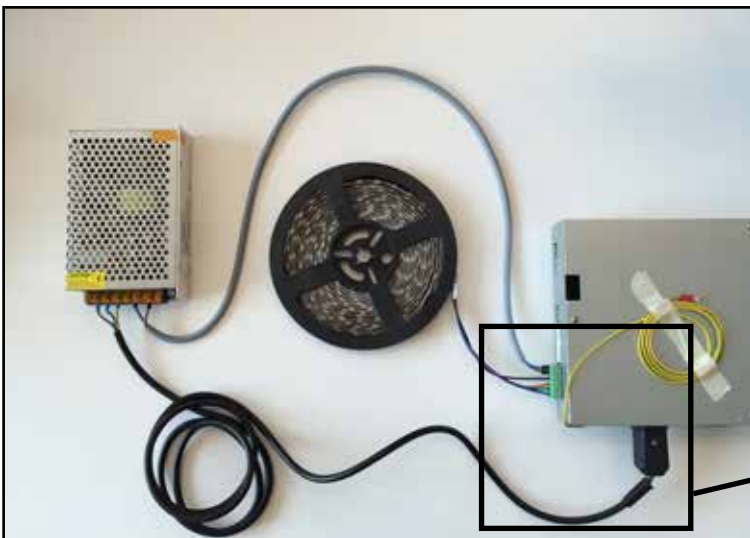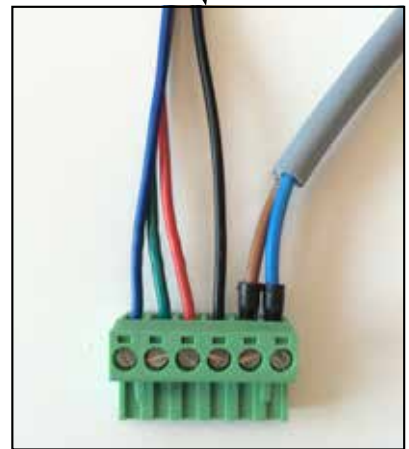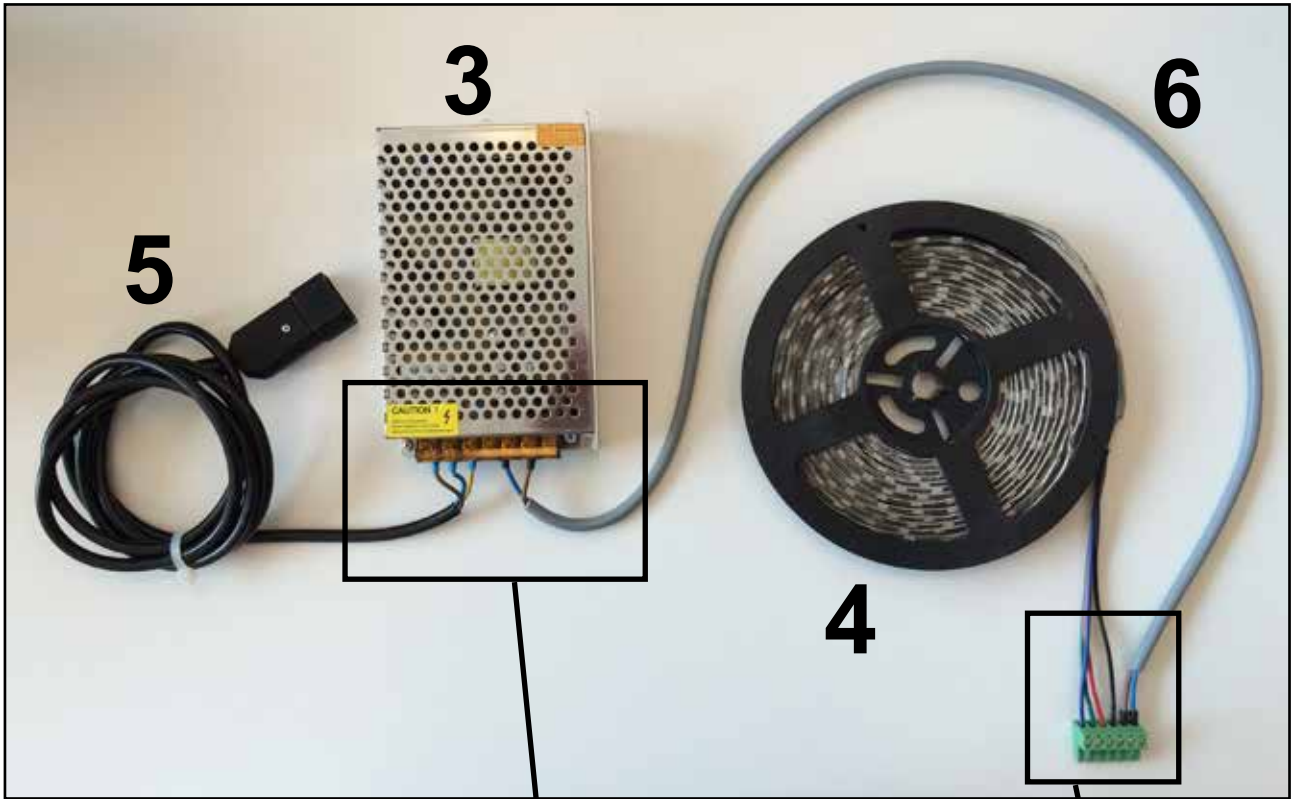



Connecting the SWIPE

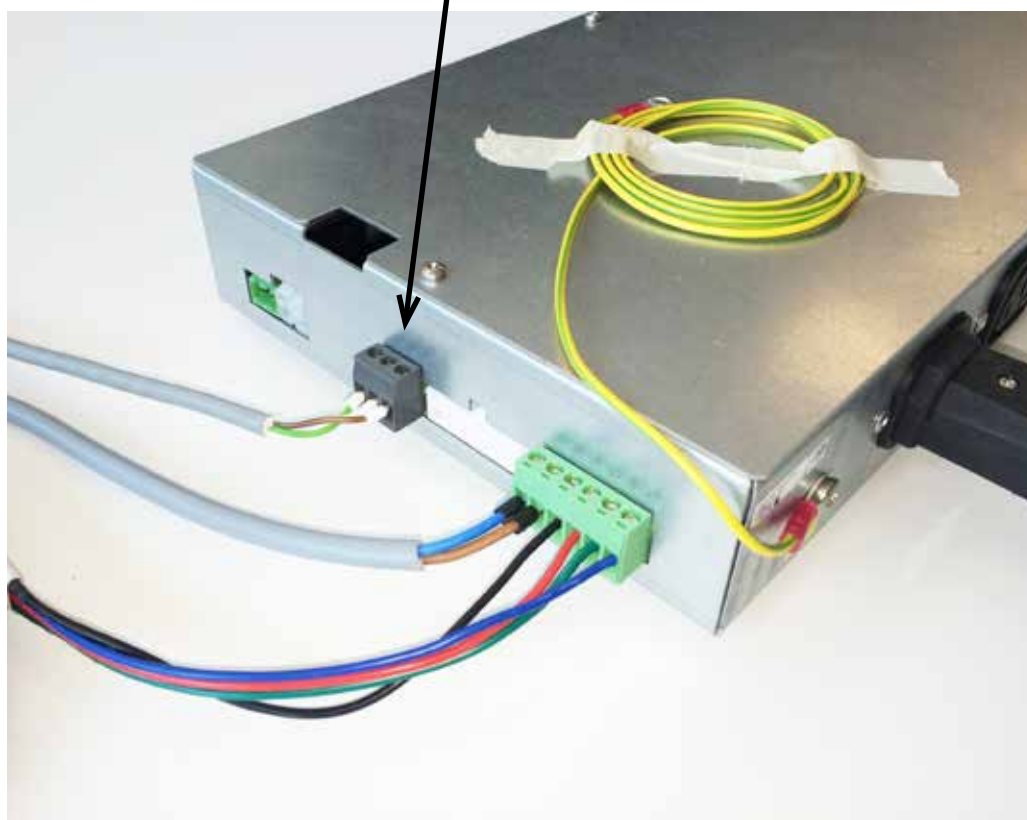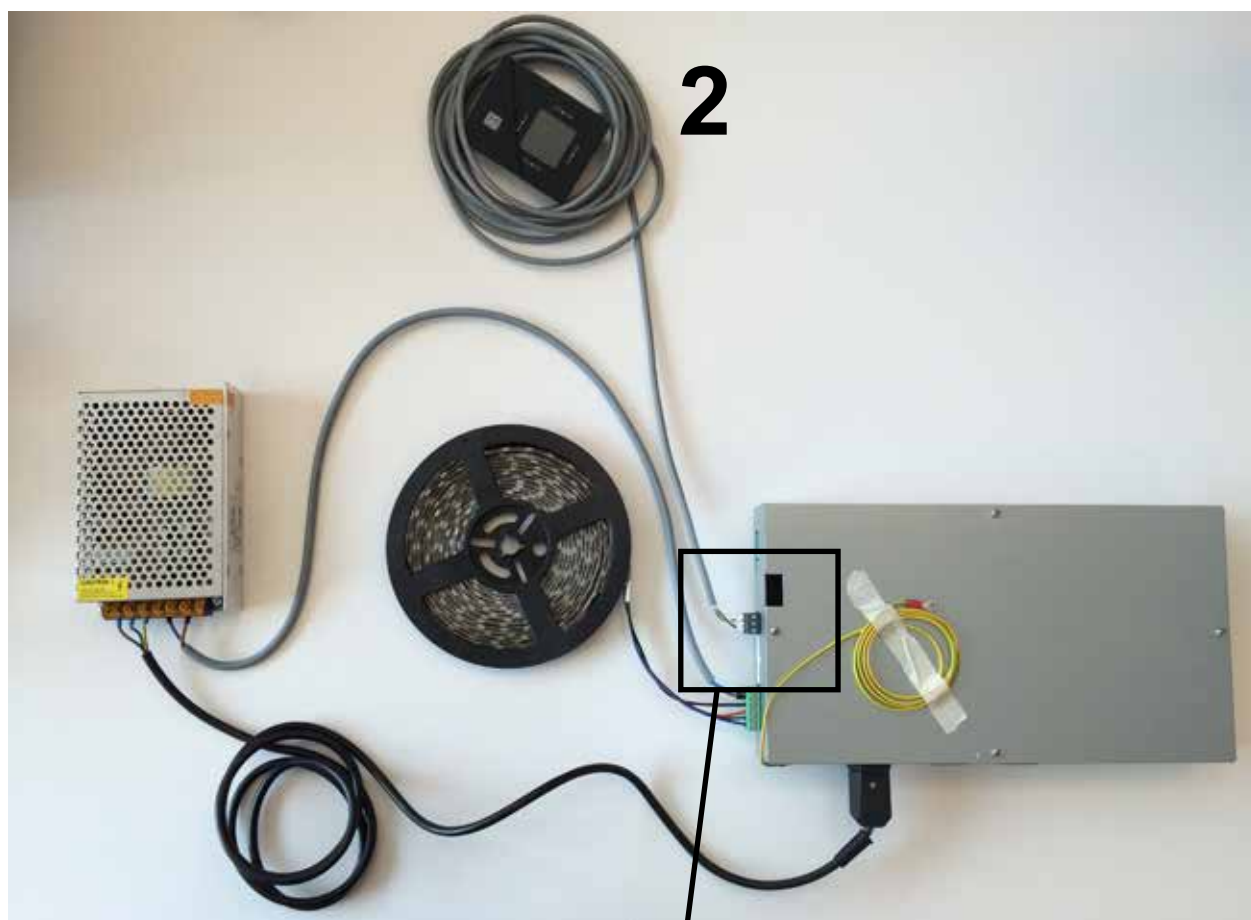


Connecting the temperature probe

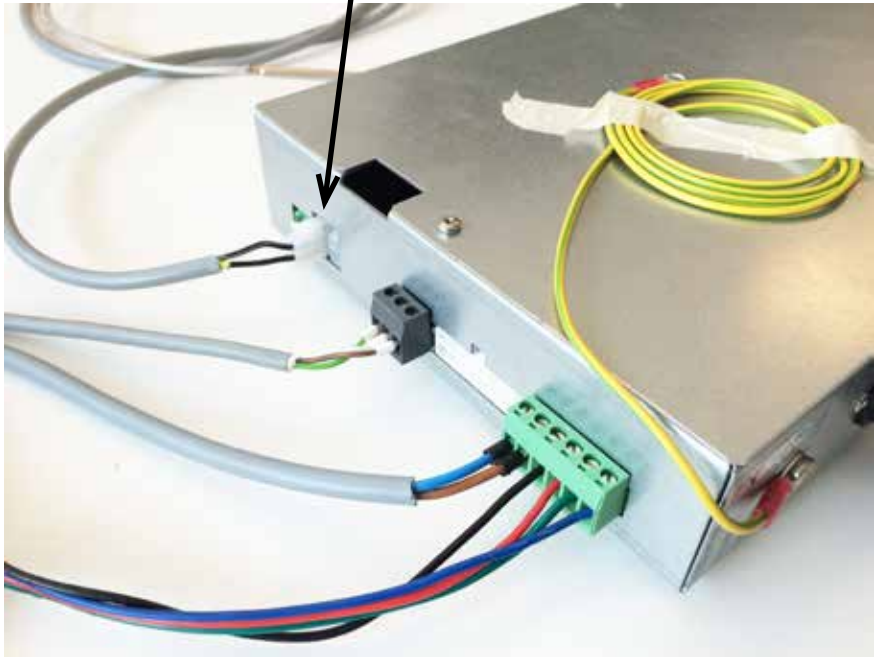

Connecting interface cables for the motors

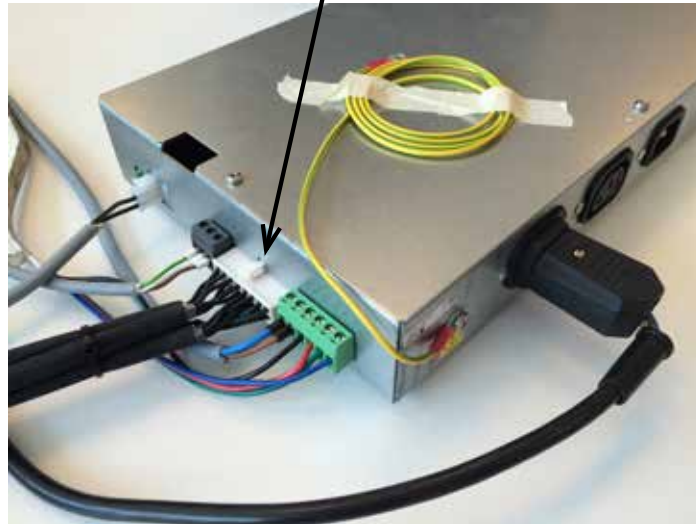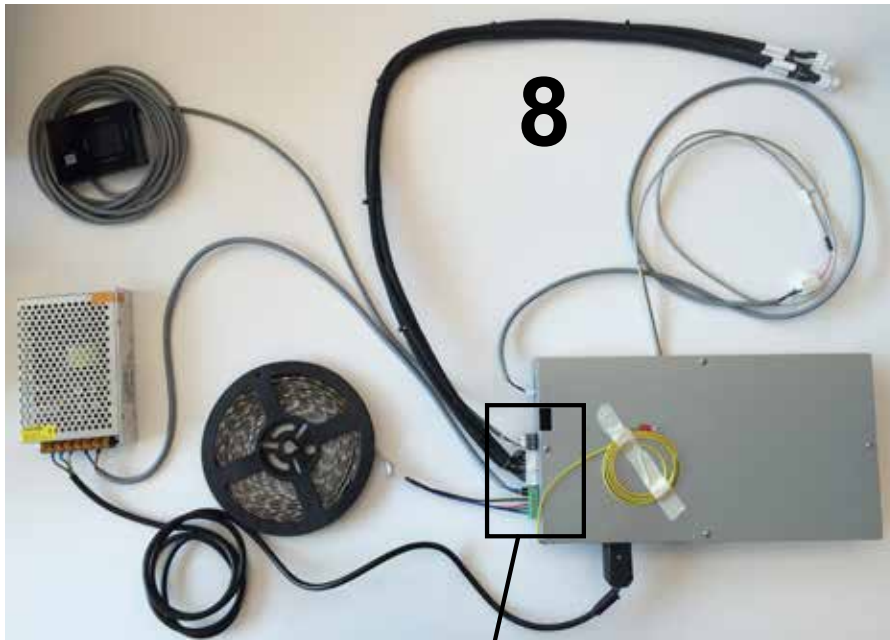

Connecting the power cable 220V

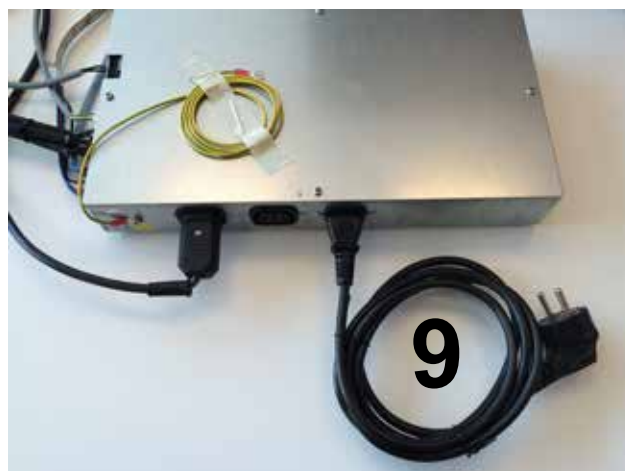


Connecting the temperature probe on the fireplace


Push the temperature probe into the hole as shown on photo.
Consolidate with a piece of ALU tape.



Connecting the plastic tube for draft measurement on the fireplace (Pascal)

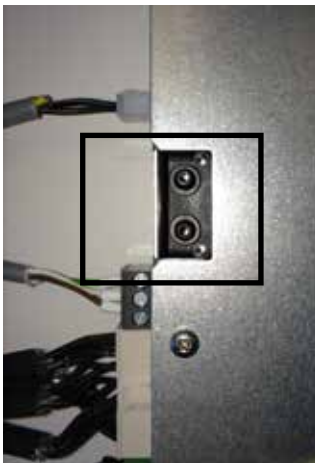

Slide the connector adapter PVC tube (10) over the entrance on the driver. use a screwdriver to increase slightly the diameter of the tube to facilitate the connection


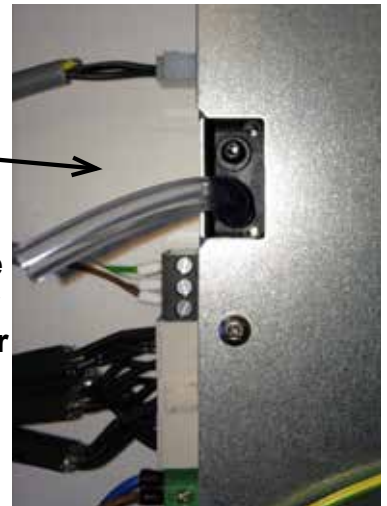


Slide the flexible PVC tube (9) on the connector adaptor PVC tube (10)



Connect the flexilble PVC tube on the fireplace like show on the photo

Connecting the motors

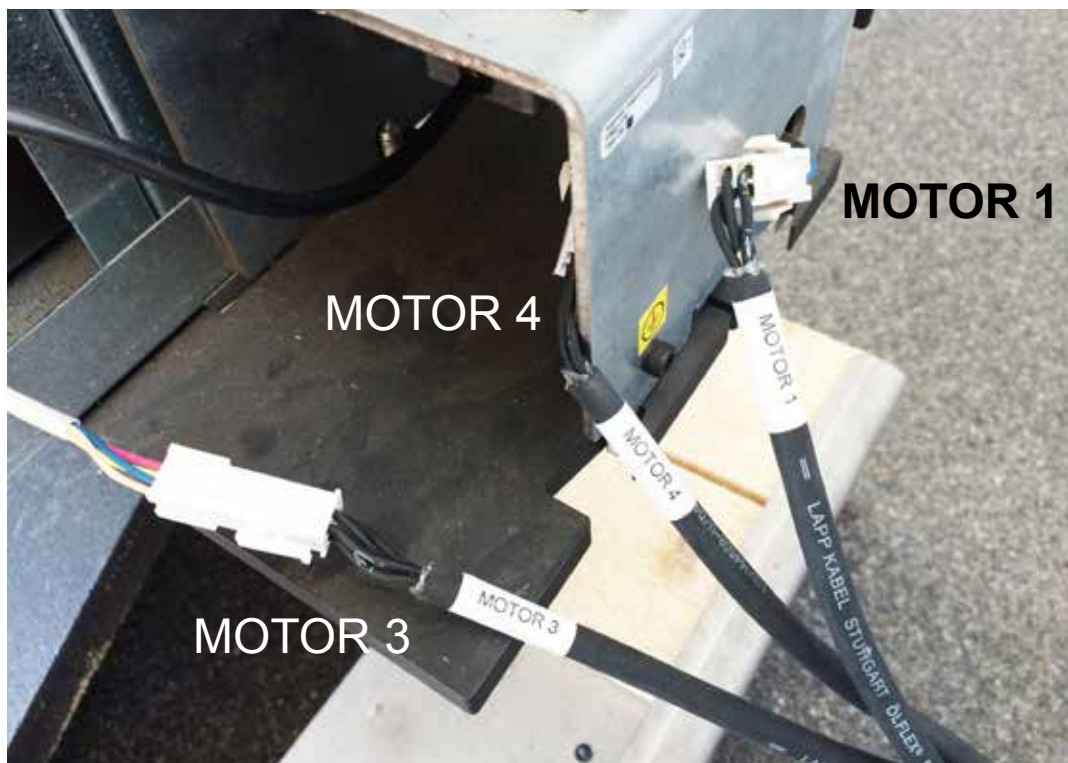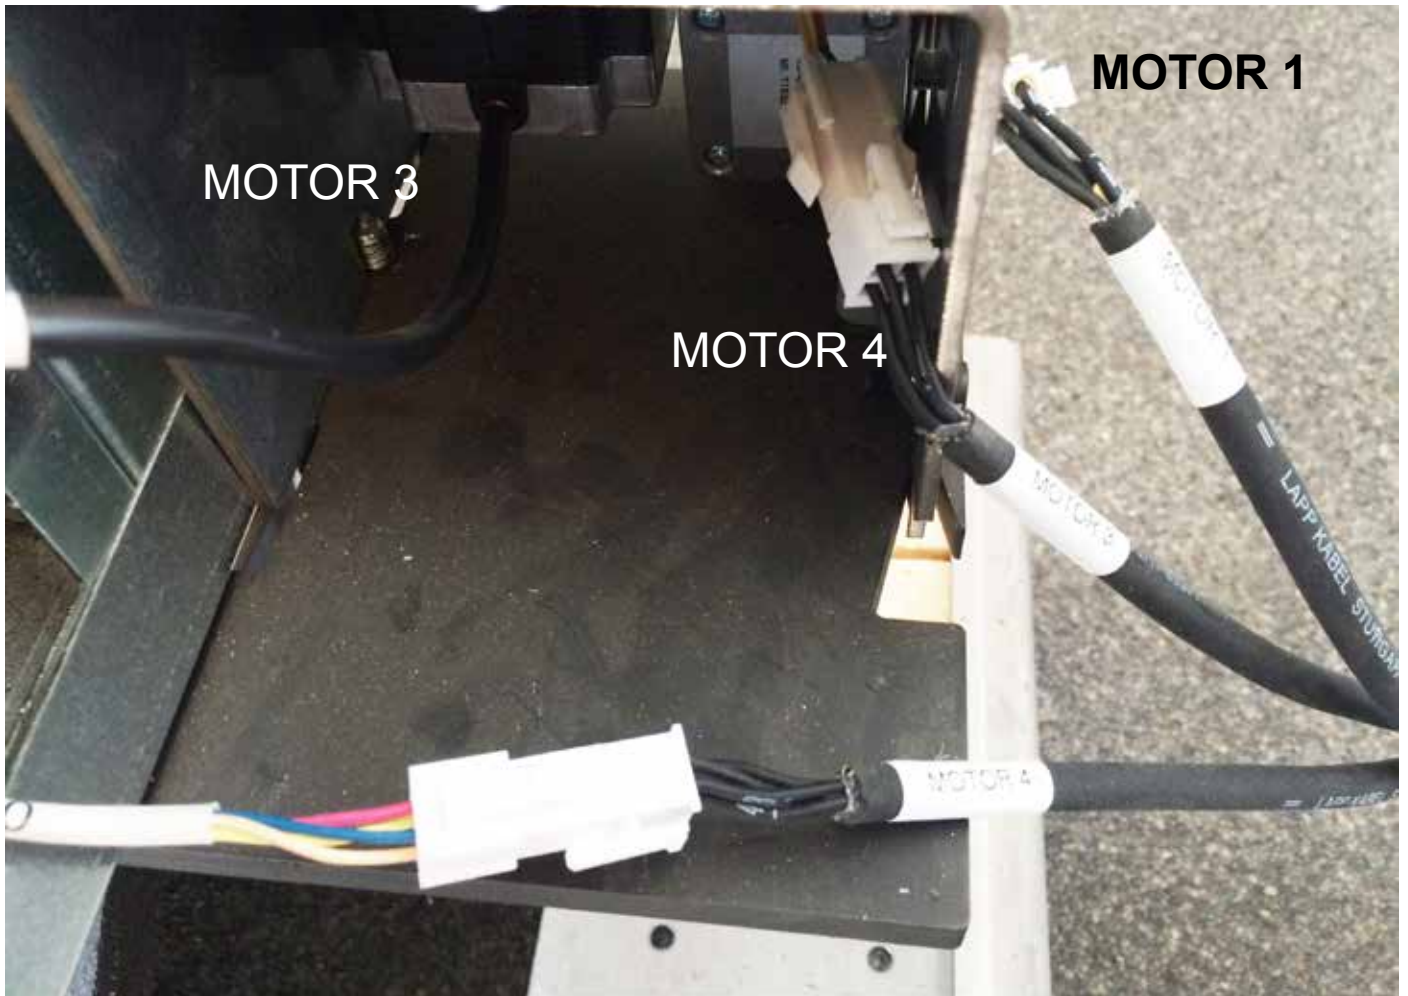

Remark : cable motor 2 is not used for this purpose